

gear4



KRG-D50

User Manual


**Thank you for buying the GEAR4 KRG-D50,
DAB radio for iPod. Please read over this manual
before use and retain it for future reference.**

KRG-D50 controls:



Made for • iPod touch
• iPod classic • iPod nano

Box contents:

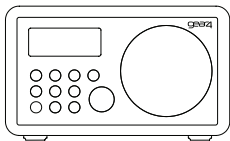


KRG-D50



User manual



3 dock adapters for iPod

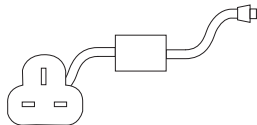

Power supply

Declaration of Conformity

Product Name: GEAR4 KRG-D50
Model: PG432UK
Distributor: Disruptive Ltd.
Address: Windsor House, Turnpike Road, High Wycombe, Bucks,
HP12 3NR, United Kingdom.

Declare that the product described below is in conformity with the relevant provisions of the following directives and National Laws and Regulations adopting these directives.

The Low Voltage Directive 73/23/EEC

The EMC Directive 89/336/EEC as amended by 91/263/EEC, 92/31/EEC, 93/97/EEC.

The product has been tested and assessed by application of the following standards or specifications. Together with all relevant National Technical Standards and Specifications as applicable.

Standard	Year	Description
EN55013:	2003	Sound and Television Broadcast receivers and associated equipment
EN55020:	2007	Sound and Television Broadcast receivers and associated equipment
EN61000-3-2:	2006	Limits for harmonic Current emissions
EN61000-3-3:	1995	Limitation of Voltage changes
EN60950:	2001	Information Technology Equipment -General Requirements

Issued in:

High Wycombe, Bucks, United Kingdom

Date: 04/01/10

Authorised Representative: Carl Walastyan

Position: Commercial Director

Signature:



RoHS



Features:

- Built-in DAB and FM radio with 40 programmable preset stations
- Universal iPod dock
- 12 / 24 hour clock with 2 programmable alarms
- Wake up to DAB, FM, iPod or buzzer
- Snooze and sleep functions
- Charges iPod when docked
- Line-in port for use with other music players
- Wooden finish
- LCD screen
- Compact design

Getting started:

- Plug the power supply into the back of the unit and then into the mains supply.
- To activate the speaker, press the STANDBY / ON button.
- To select the mode, press MODE on the speaker to scroll between the options (DAB, FM, iPod, AUX).

For use with iPod:

- Press the MODE button to select iPod mode.
- Select and insert the correct iPod docking adapter to suit your iPod.
- Carefully insert your iPod into the dock, playback will start automatically.
- Press INFO **⏏** or PRESETS **⏏** to scan through tracks.
- Press VOL +/- to adjust the volume.
- Press SCAN **⏏** to play or pause a track.
- To navigate your iPod menus, use the MENU button, SELECT dial and SELECT button.

N.B. Charges all iPod models when docked, excluding 1st and 3rd generation.

For use with DAB radio:

- Extend the radio antenna.
- Press the MODE button to select DAB mode.
- For initial use the radio will make a full scan, and store the stations in memory.
- Turn the SELECT dial to scan through available stations. Press SELECT to confirm.

- To find other stations press the MENU button and use the SELECT dial to scroll between Station List, Full Scan, or Manual Tune. Press SELECT to confirm.
- Turn the SELECT dial to scan through available stations. Press SELECT to confirm.
- Press the INFO \blacktriangleleft button to scroll through the available information (station name, current time & date, signal strength and frequency).
- To select station order, press the MENU button and use the SELECT dial to scroll to Station Order. Press SELECT to confirm.
- Use the SELECT dial to scroll between Alphanumeric and Ensemble. Press SELECT to confirm.

Alphanumeric – Display all stations in alphanumeric order.

Ensemble – List active stations (ones that are currently broadcasting) before inactive ones.

For use with FM radio:

- Extend the radio antenna.
- Press the MODE button to select FM mode.
- Turn the SELECT dial to select the desired frequency, alternatively press the SCAN button to auto-search.

- Press the INFO \blacktriangleleft button to scroll through the available information (station name, current time & date, signal strength and frequency).

To save a preset frequency:

- You can set up to 20 DAB presets and 20 FM presets.
- Adjust the radio to your desired frequency then press and hold the PRESETS \blacktriangleright button. Use the SELECT dial to scroll through preset stations 1-20 and find a free preset. Press SELECT to confirm.
- To scan through your preset stations press MODE to select DAB or FM. Press the PRESETS \blacktriangleright button and use the SELECT dial to scroll through presets.

To reset the radio:

- Press the MENU button and then use the SELECT dial and button to choose: System > Factory Reset.
- Turn the SELECT dial to scroll to 'YES' and press SELECT to confirm. Your presets will be erased and the radio returned to its factory settings.

For use with other audio devices:

- Press the MODE button to select AUX mode.
- Plug a 3.5mm audio cable (not included) into your CD, MP3 or MP4 player, and connect the other end into the AUX jack at the back of the unit.
- Press play on your CD, MP3 or MP4 player.

To set the clock and date:

- Press the CLOCK button to set the time.
- Turn the SELECT dial to adjust the hour. Press SELECT to confirm.
- Turn the SELECT dial to adjust the minutes. Press SELECT to confirm.
- Set the date using the same method.

To set the alarm:

- Press the ALARM button to set the alarm function.
- To set alarm 1, turn the SELECT dial to Alarm 1. Press SELECT to confirm.
- Turn the SELECT dial to select 'ON'. Press SELECT to confirm.
- Turn the SELECT dial to adjust the hour. Press SELECT to confirm.

- Turn the SELECT dial to adjust the minutes. Press SELECT to confirm.
- Turn the SELECT dial to set the alarm duration time (duration options: 15, 30, 45, 60 or 90) Press SELECT to confirm.

N.B. Duration time is the amount of time the alarm will sound for in total. If the snooze button is pressed within this time, the remaining time will continue when the alarm sounds again after the snooze interval.

- Turn the SELECT dial to set alarm mode – DAB, FM, iPod, or Buzzer. Press SELECT to confirm.
- Turn the SELECT dial to scroll through alarm settings (daily, once, weekends, weekdays). Press SELECT to confirm.
- Turn the SELECT dial to set the volume. Press SELECT to confirm.
- Turn the SELECT dial to the Save option. Press SELECT to confirm.
- To set alarm 2, repeat the above steps.

Sleep and snooze functions:

- **Sleep:** The sleep timer switches the unit off automatically after preset intervals. To set, press the MENU button, use the SELECT dial to select System > Sleep. Press SELECT to confirm. Use the SELECT dial to select 0-90.

Press SELECT to confirm.

N.B. The sleep function can only be set when out of standby.

- **Snooze:** When the alarm sounds, press the SNOOZE button once to set for 5 minutes, twice for 10 minutes etc (snooze options: 5, 10, 15, 30).

To set the date:

- Press the MENU button and then use the SELECT dial and button to choose: System > Time. Press SELECT to confirm.
- Turn the SELECT dial to choose between Auto Update or Set Date. Press SELECT to confirm.

IF YOU CHOOSE THE SET TIME / DATE OPTION:

- Press SELECT 3 times to move through the time settings.
- Turn the SELECT dial to change the date. Press SELECT to confirm.
- Set the month and year using the same method.
- For Auto Update, the date will be taken automatically from the DAB program.

N.B. The time and date will therefore not update unless you are playing through DAB radio.

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

CAUTION

Use of controls or adjustments of performance of procedures other than those specified may result in hazardous radiation exposure.

UNPACKING AND INSTALLATION

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store your unit. To avoid damage, never place the unit or it's batteries near radiators, in front of heating vents, under direct sunlight or near water.

FOR YOUR SAFETY

- When disconnecting the power supply from the mains, pull the plug from the wall. Do not pull out by the cable.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cable. If the plug or power supply cable needs to be replaced, ensure that it complies with the manufacturer's recommendation.
- Unplug the unit during lightning storms and when unused for extended periods of time.

To download some of the finest new music around for FREE, visit:
www.gear4.com/newmusic

Please ensure that your iPod is using the latest software version. To update the software, connect your iPod to iTunes. If there is a newer software version available you will be prompted to upgrade. All rights reserved. Reproduction in whole or in part is prohibited. GEAR4 and product names are trademarks of Disruptive Ltd. iPod is a trademark of Apple Inc., registered in US and other countries. All other product names are or may be trademarks of and used to identify products or services of their respective owners. Brands are used for illustration purposes only and should not be used to infer any relationship between GEAR4 and respective owners.

“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

DISPOSAL


According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system. Please act according to your local rules and do not dispose of your old products with your normal household waste.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated ‘Dangerous Voltage’ within the product’s enclosure that may be of sufficient magnitude to constitute risk of electric shock to person.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

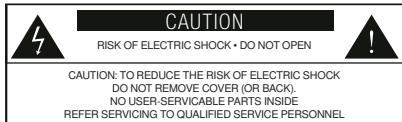

GEAR4 One-Year Warranty

Disruptive Ltd owners of the GEAR4 brand warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase ("Warranty Period").

THE WARRANTY DESCRIBED IN THIS PARAGRAPH SHALL BE IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

This warranty does not apply to damage or defects caused by failure to follow the enclosed instructions, accident, abuse, misuse, misapplication, product modification, faulty ancillary equipment, improper voltage or current, lightning or other acts of God, commercial non-home use, normal wear and tear, shipping damage or loss, damage to digital media players or damage caused by service performed by anyone other than GEAR4.

GEAR4 will, at its option, repair or replace any product covered by this warranty that proves to be defective in workmanship or materials. If your product is no longer being manufactured or is out of stock, at its option, GEAR4 may replace your product with a similar or better product. GEAR4's liability is limited to the repair or replacement, at our option, of any defective product under warranty and shall not include any incidental or consequential damages. This warranty is valid only in Europe, is not transferable and does not extend to users other than the original purchaser.

Return Policy / Warranty Service

Proof of Purchase as evidence the unit was purchased from an authorised dealer within the Warranty Period is required for warranty service. In order to make a warranty claim, the purchaser must contact GEAR4 within 60 days of occurrence. If service is required, do not return the product without first contacting GEAR4. To get this product repaired or replaced, you must contact GEAR4 during the Warranty Period by email (support@gear4.com). You must include your email address, name, address, telephone number, date and place of purchase, alternative contact and a detailed description of the problem you are experiencing and the name / details of the product.

If the problem appears to be based on a defect in workmanship or materials, GEAR4 will provide a Return to Manufacturer Authorisation number and instructions for return shipment. Return shipments are at the customer's expense, and the return **MUST** be accompanied by the original proof of purchase. GEAR4 is not responsible for lost or damaged product during shipment. Any product returned without the original proof of purchase will be returned at the customer's expense.

To avoid any charges, all returns and exchanges must include the original packing materials, product box, all included accessories which may include, without limitation, power adapter or power cord, connecting cables, remote control, adapters, inserts cards and instruction manuals. Any replacement units or parts may be new or rebuilt. GEAR4 will not be liable for inconvenience, loss of time, loss of use of the product, lost profits or exemplary or consequential damages caused by or relating to this product.

This warranty gives you specific legal rights. You may also have other rights that vary from country to country. Some countries do not allow the exclusion or limitations of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above may not apply to you.

Purchase or use of the GEAR4 product constitutes your acknowledgement of, and agreement to completely abide by, the forgoing warranty and disclaimers.

MODEL NO: PG432UK

POWER ADAPTER: KSS24_120_1200B

INPUT:100-240V ~ 600MA

MODE: SWITCHING

OUTPUT: 12VDC 1200mA

All rights reserved. Reproduction in whole or in part is prohibited. GEAR4 and product names are trademarks of Disruptive Ltd. iPod is a trademark of Apple Inc., registered in US and other countries. All other product names are or may be trademarks of and used to identify products or services of their respective owners. Brands are used for illustration purposes only and should not be used to infer any relationship between GEAR4 and respective owners.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.